


1. Informacje o produkcie

Ramka do montażu wpuszczanego (podtynkowego) wraz z osłoną przeciwdeszczową. Wykonana z aluminium z powłoką olejną. Przeznaczona dla paneli wejściowych multiapartament serii 100.

2. Zawartość opakowania





Ramka z osłoną przeciwdeszczową



Instrukcja obsługi

3. Instalacja

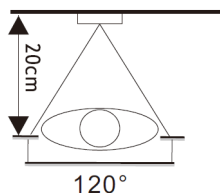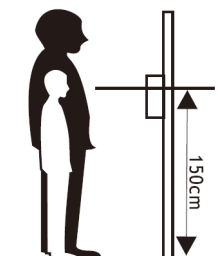

1. Należy ustawić panel w najbardziej dogodnej pozycji zgodnie z rysunkami po lewej stronie. Należy unikać pozycji bezpośredniego nasłonecznienia kamery oraz mocno zacienionych miejsc.
2. Sugerowana wysokość montażu to 1,5 - 1,6 metra.

3. Wykonać otwór w ścianie na odpowiedniej wysokości, zalecane wymiary to 250mm x 110mm x 25mm.


4. Przymocować uchwyt do ściany za pomocą kołków rozporowych i śrub.

5. Przeprowadzić kabel przez uchwyt podtynkowy.


6. Wsunąć ramkę (punkty A i B) w uchwyt podtynkowy (punkty a i b).

7. W celu zamontowania panelu wejściowego, przechyl panel pod kątem około 30°, następnie zamocuj haczyk z tyłu panelu w płytce (punkt C) znajdującej się w górnej części wewnętrznej strony puszkii podtynkowej. Następnie delikatnie dociśnij dolną część panelu wejściowego.

8. Za pomocą klucza imbusowego wkręć dwie śruby montażowe w dwa otwory pod panelem wejściowym.

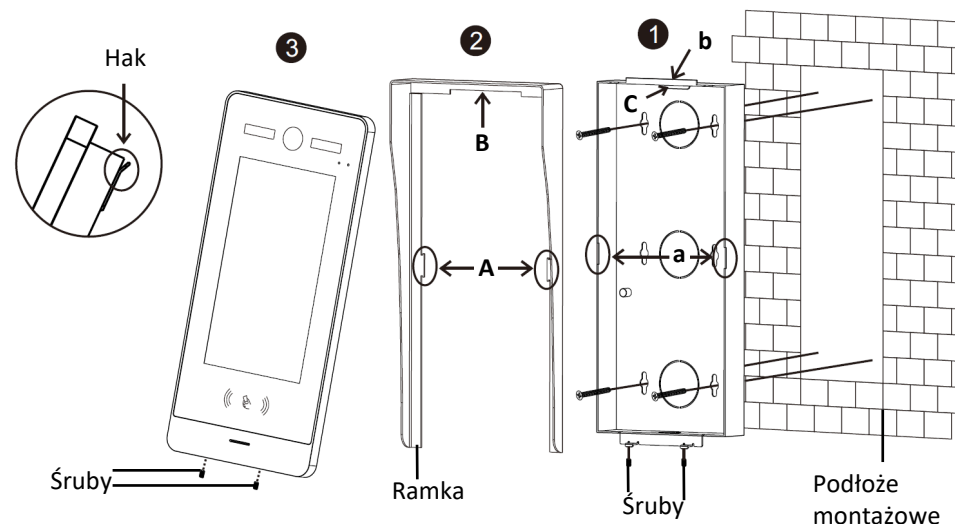


4. Wymiary

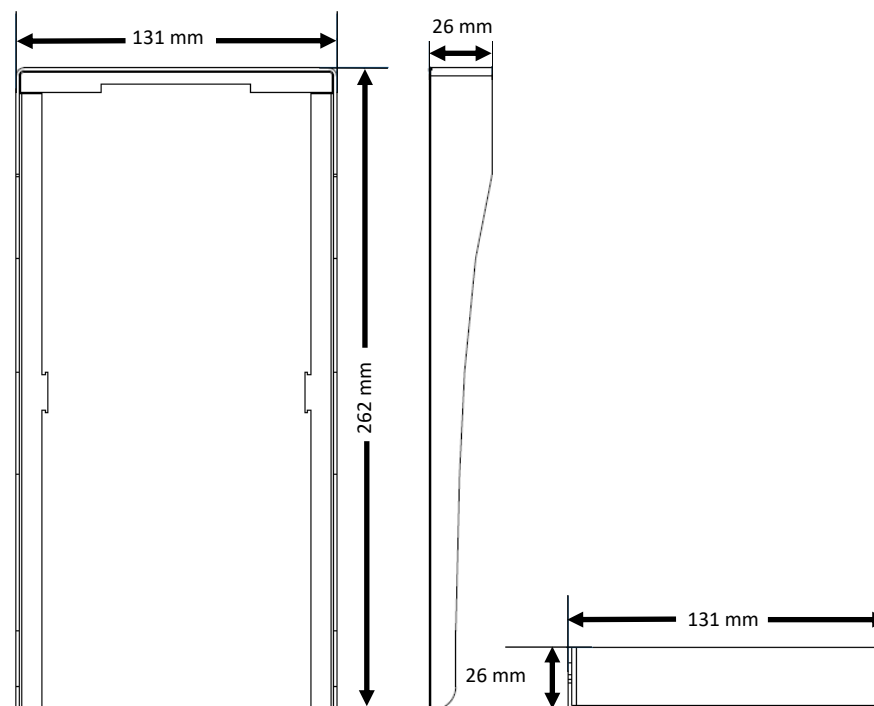

1. Product information

Flush-mount (in-wall) frame with rain shield. Made of oil-coated aluminum. Designed for 100 series multi-apartment panels.

2. Package contents





Flush-mount frame
with rain shield



Manual
Instruction

3. Installation

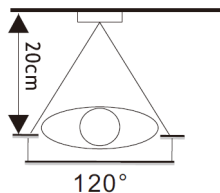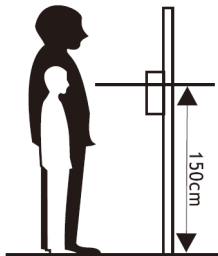

1. Set the panel in the most convenient position according to the drawings on the left. Avoid direct sunlight and heavily shaded places.
2. The suggested installation height is 1.5 - 1.6 meters.

3. Prepare a hole at the correct height in the wall, the recommended dimensions are 250 mm x 110 mm x 25 mm.


4. Fix the flush-mount bracket to the wall using wall anchors and screws.

5. Pass the cables through the wall and mount.

6. Slide the frame (points A and B) into the flush-mount bracket (points a and b).

7. To install the panel, tilt the panel at an angle of approximately 30°, then secure the hook on the back of the panel into the plate (point C) located at the top of the inside of the flush-mount bracket. Then gently press down on the bottom of the panel.

8. Using an allen wrench, screw the two mounting screws into the two holes beneath the panel.

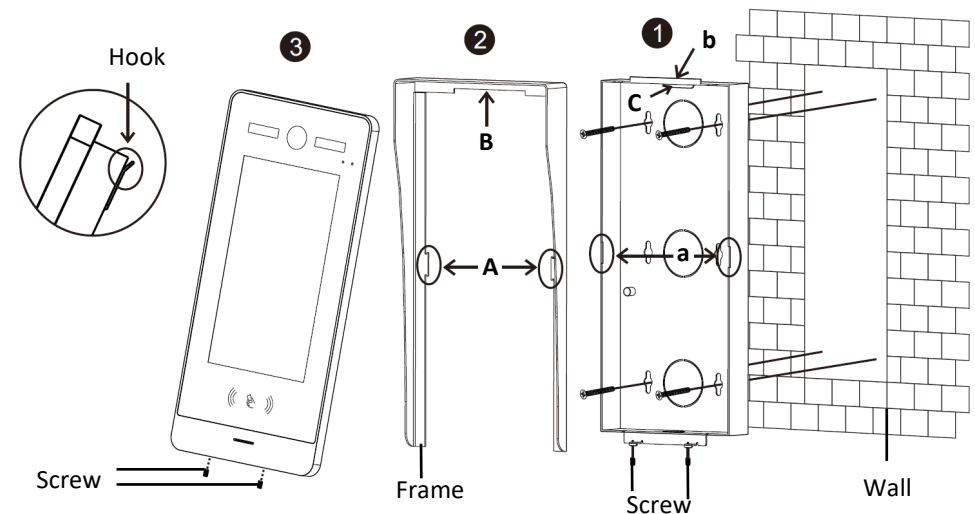

4. Dimensions

