


1. Informacje o produkcie

Obudowa do montażu powierzchniowego (natynkowego) wraz z osłoną przeciwdeszczową. Wykonana z aluminium z powłoką olejną. Przeznaczona dla paneli wejściowych multiapartment serii 100.

2. Zawartość opakowania



Obudowa z osłoną przeciwdeszczową



Instrukcja obsługi





4x Kołek rozporowy




4x Śruba montażowa

3. Instalacja

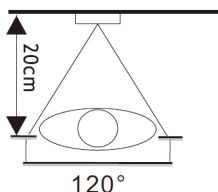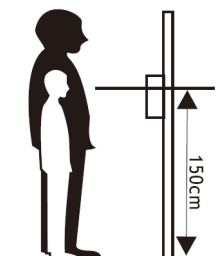


1. Należy ustawić panel w najbardziej dogodnej pozycji zgodnie z rysunkami po lewej stronie. Należy unikać pozycji bezpośredniego nasłonecznienia kamery oraz mocno zacienionych miejsc.
2. Sugerowana wysokość montażu to 1,5 - 1,6 metra.

3. Wywiercić otwory na kołki i kable zgodnie z rozmieszczeniem otworów w obudowie.
4. Przymocować obudowę za pomocą śrub montażowych dołączonych do zestawu do podłoża montażowego.
5. Przepuścić kable przez obudowę.
6. W celu zamontowania panelu wejściowego, przechylić panel pod kątem około 30°, następnie zamocuj haczyk z tyłu panelu w płytce (punkt A) znajdującej się w górnej części wewnętrznej strony obudowy. Następnie delikatnie dociśnij dolną część panelu wejściowego.
7. Za pomocą klucza imbusowego wkręć dwie śruby maszynowe w dwa otwory pod panelem wejściowym.

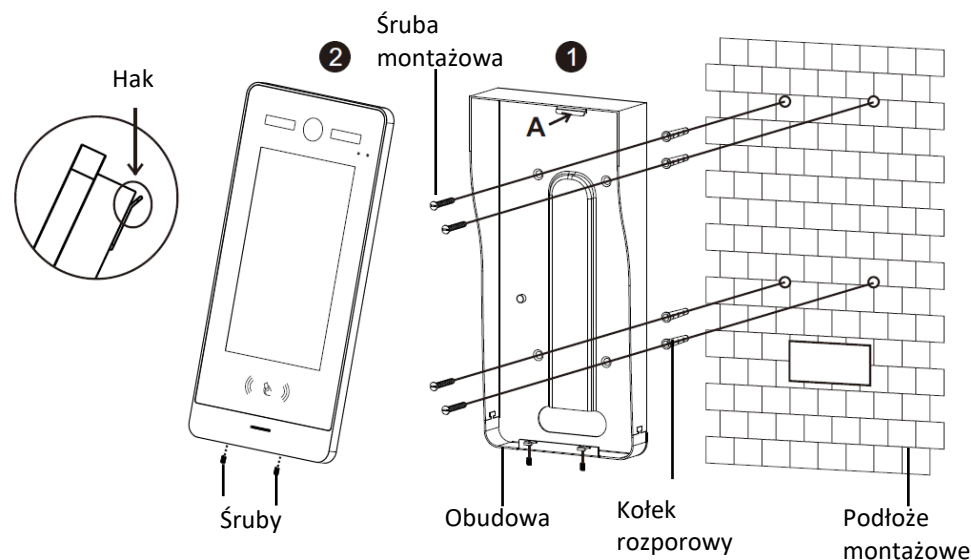


4. Wymiary

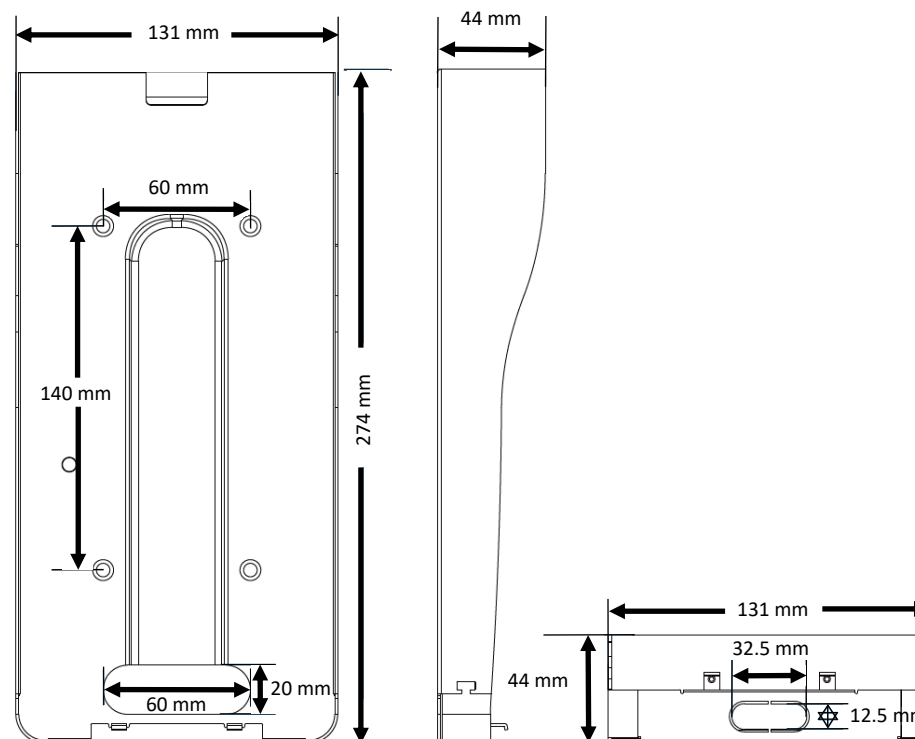

1. Product information

Surface-mount (surface-mounted) housing with a rain shield. Made of aluminum with an oil-based coating. Designed for 100 series multi-apartment panels.

2. Package contents



Housing with a rain shield



Manual instruction





4x Expansion bolt




4x Fixing screw

3. Installation

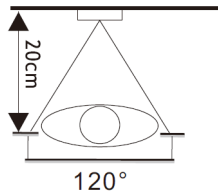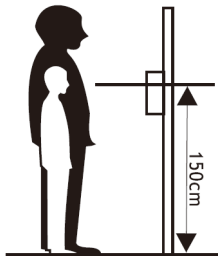

1. Set the panel in the most convenient position according to the drawings on the left. Avoid direct sunlight and heavily shaded places.
2. The suggested installation height is 1.5 - 1.6 meters.

3. Drill holes for the screws according to the hole layout on the housing.
4. Fix the housing using fixing screw included in kit.
5. Pass the cables through the mount.
6. To install the panel, tilt the panel at an angle of approximately 30°, then secure the hook on the back of the panel into the plate (point A) located at the top of the inside of the housing. Then gently press down on the bottom of the panel.
7. Using an allen wrench, screw the two mounting screws into the two holes beneath the panel.

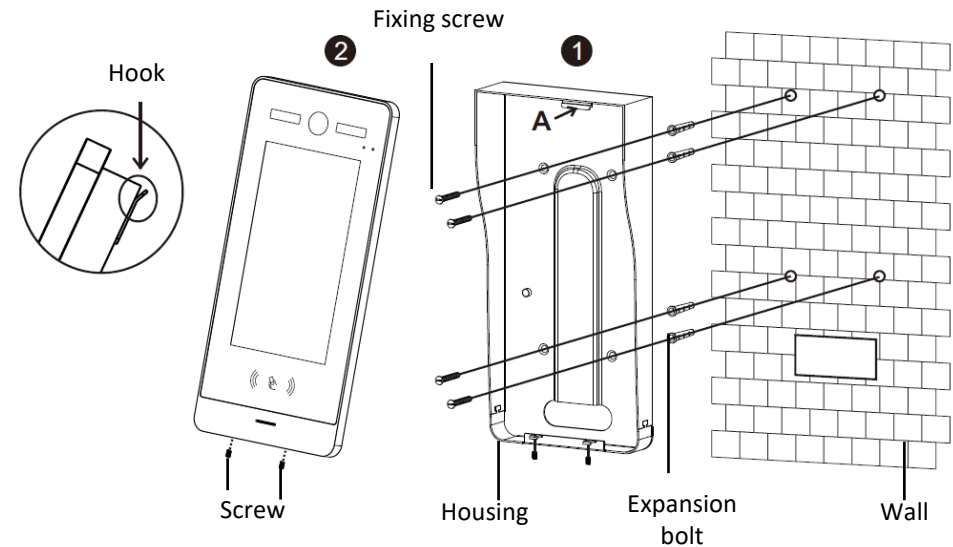

4. Dimensions

